


# VICTORIAN EASY MEASURING GUIDE...

## Width:

- The red dotted line indicates the position of the blind headrails once installed (as the bracket protrudes 9.5cm, to clear the handles and allows the fabrics to tilt).
- Measure the widths of the blinds 10cm in front of the actual window (AS PER THE RED DOTTED LINES).

Tip: You can measure in between the gap in the window cill for the door width.

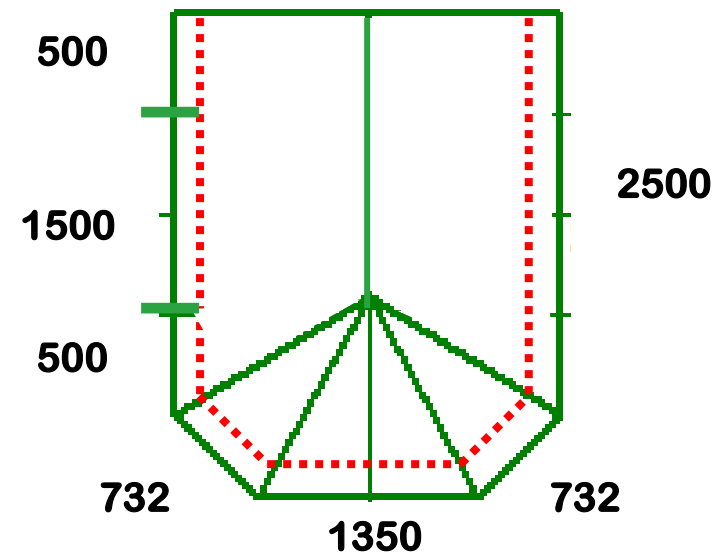

## Length:

You can either fix onto the window frame itself or to the fascia board above (that runs all the way around the conservatory above the windows and door).

- If you are fitting to the window frame, measure from the top of the window (just under where the fascia board protrudes slightly) down to the window cill.

OR

- If you are fixing to the fascia, measure from the middle of the fascia board down to the window cill.

Note: In both cases leave 1cm gap at the bottom so the fabrics do not touch the window cill / floor