


EDWARDIAN EASY MEASURING GUIDE... (follow the same instructions if your conservatory is a lean to)

Width:

- Measure corner to corner (as tight measurements).

Tip: You can measure in between the gap in the window cill for the door width.

Don't worry about where the headrails will butt up to each other in the two corners, as we will make the necessary deductions when manufacturing. It's easier for you to measure without taking this into account.

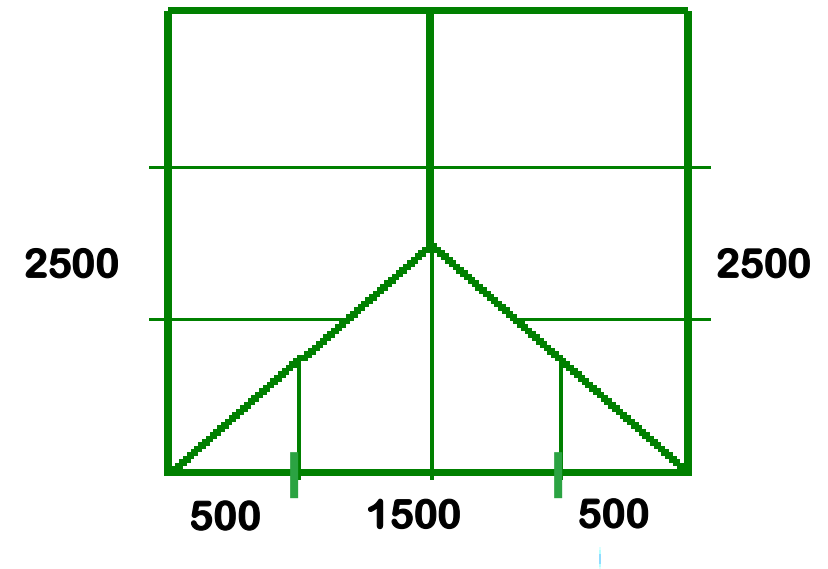

Length:

You can either fix onto the window frame itself or to the fascia board above (that runs all the way around the conservatory above the windows and door).

- If you are fitting to the window frame, measure from the top of the window (just under where the fascia board protrudes slightly) down to the window cill.
- OR
- If you are fixing to the fascia, measure from the middle of the fascia board down to the window cill.

Note: In both cases leave 1cm gap at the bottom so the fabrics do not touch the window cill / floor